

## How to copy the G70 upgrade MSSONY file to Memory Stick

The following is the procedure to copy the G70 upgraded MSSONY file to the Memory Stick's MSSONY directory.

Note: The Memory Stick needs to be formatted with a PCS system

### Prepare the installation material and tools:

- 1) Memory Stick (more than 128Mbyte).
- 2) PC with Windows XX
- 3) Upgrade MSSONY file
- 4) Memory Stick adapter for FDD or USB or PCMCIA Card.

FDD:	MSAC-FD2M
USB:	MSAC-US1
PCMCIA:	MSAC-PC2N

### Procedure:

Format the Memory Stick.

- Insert to Memory Stick to the memory stick slot on PCS System
- Select the MS icon.
- Memory Stick Format? Select "Yes"
- Confirm display "format complete" on screen.
- Remove the Memory Stick from PCS system

Download software file "PCS-G70Verxxxxx" from website to the PC.

- Double click the "PCS-G70Verxxxxx" file.
- The file will auto unzip, verify "PCS-G70xxxxx/MSSONY" is there.
- Place the formatted MS into your MS adapter of the PC.
- Access the Memory Stick directory.
- Drag "MSSONY" file from unzipped (folder), and drop into MS directory
- Answer YES to replace 'MSSONY' question.

Upgrade PCS-G70 with Memory Stick

- Insert Memory Sick into memory stick slot of PCS-G70
- Turn PCS-G70On. The STANDBY lamp will flash. (~2.5 min)
- When loading is completed, the PCS-G70 will auto start.
- Remove the Memory Stick from PCS-G70
- Verify software version in the information page of the setup menu.

**Note:** The MSSONY file version cannot be identified at this time. Make sure the directory where the file is kept after is un-zipped, is labeled with the version number.